
ENG / 23.02

isotec

SOLAR MOUNTING SYSTEMS

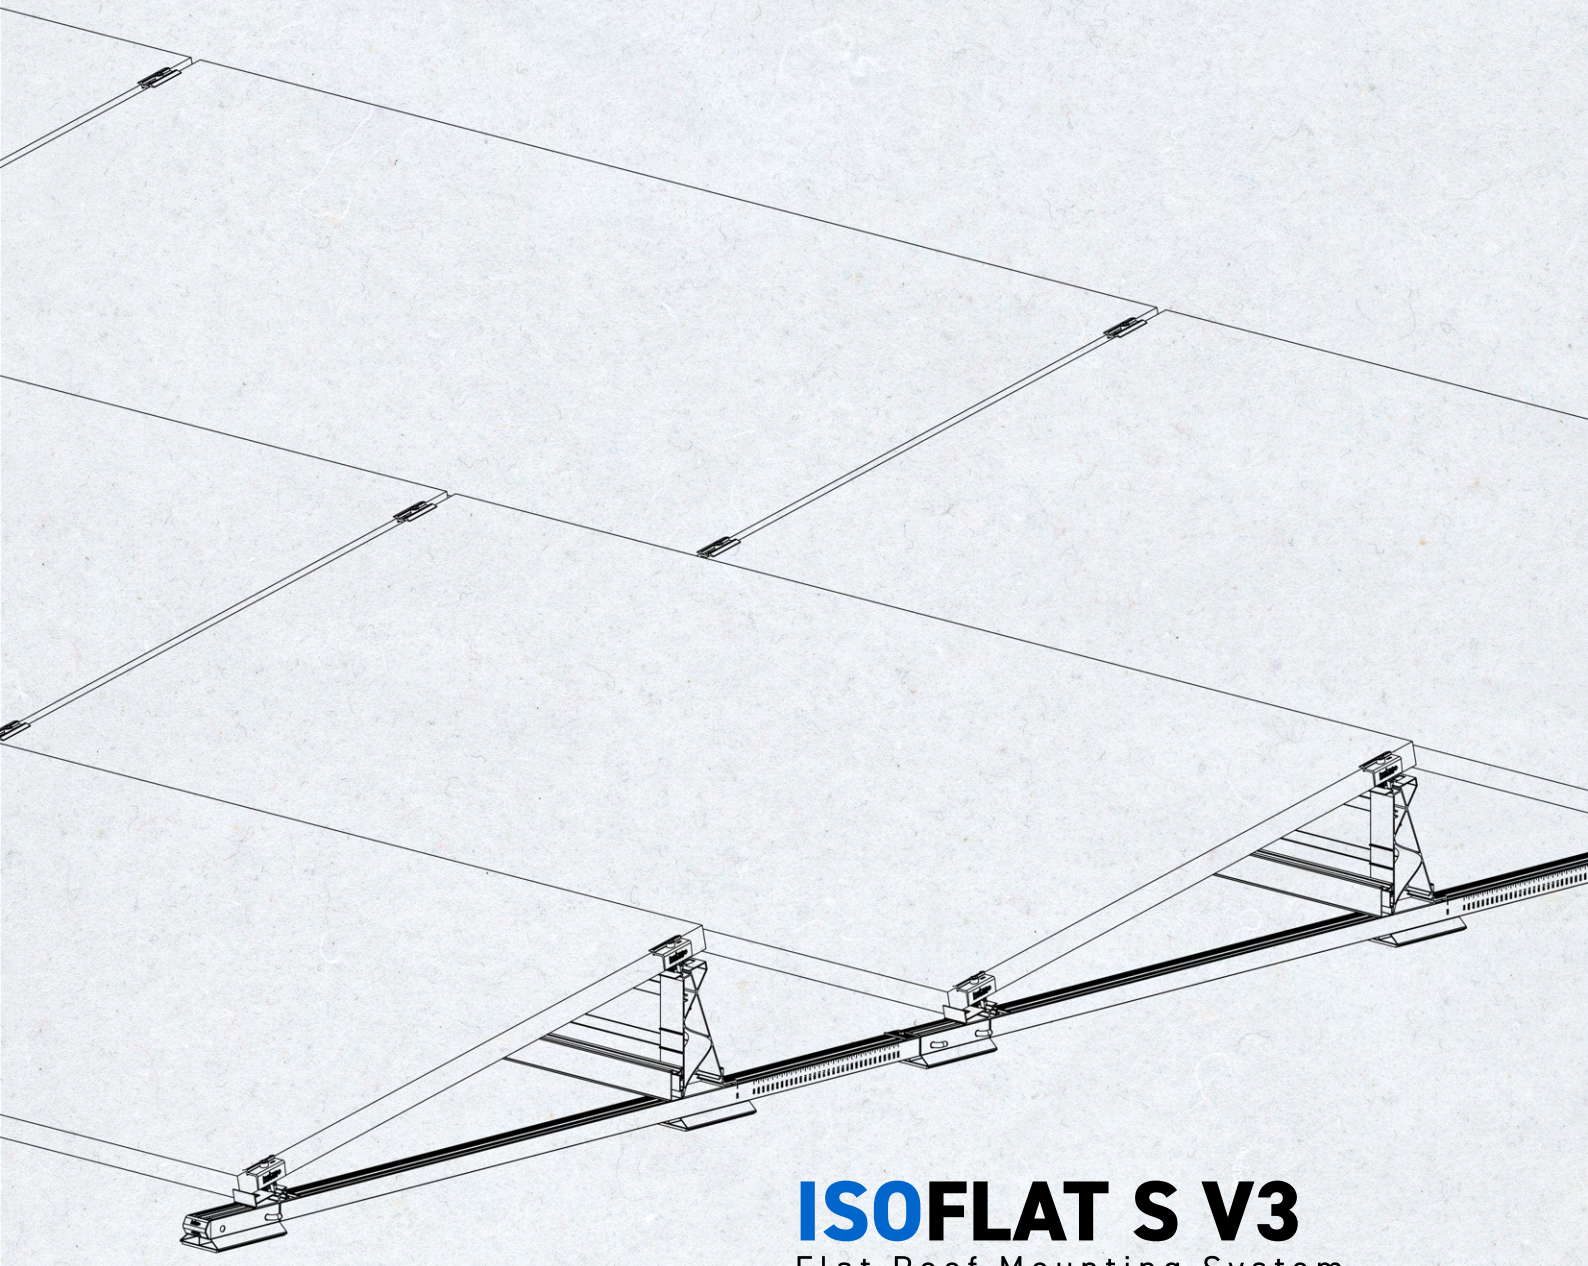

ISOFLAT S V3

Flat Roof Mounting System

INSTALLATION GUIDE
Short Side Connection

CONTENTS

- Required Tools 2
- Safety Instructions 3
- Components 4
- Accessories 5
- Installation 6 - 11
- Fixation Types 12 -14
- Notes 15

REQUIRED TOOLS



Tape Measure

It is used to apply and control the dimensions specified in the assembly manual.



Marking

Necessary to mark the specified dimensions.



Electric Screwdriver

It is used to perform the assembly of the bolts used in the system.

6 mm



Torque Meter

It is used to ensure that the bolts used in the system are tightened at the desired torque value.

Measuring range ;

M8 : 14 - 17 N.m




Allen

It is used to perform the assembly of the clamps used in the system.

6 mm

Dimensioning Device

İt is used to determine the installation intervals of the rail sets in the system.

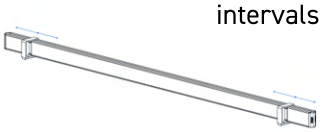

SAFETY EQUIPMENT

Protective Gloves

Safety Shoes

Helmet

Protective Clothing

SAFETY INSTRUCTIONS

- Systems may only be assembled and commissioned by persons who can guarantee proper implementation based on their specialised suitability (e.g. training or profession) or experience.

- National and site-specific building codes, standards and environmental regulations must strictly be adhered to.

- Occupational safety and accident prevention regulations, relevant standards as well as regulations of professional associations must be complied with. The following must be particularly paid attention to:

- Protective clothing must be worn (especially safety helmet, work boots and gloves).

- Two persons must be present during the entire assembly process, in order to ensure rapid assistance in case of an accident.

- The assembly instructions of the module manufacturer must be adhered to.

- Equipotential bonding between individual system components must be performed in compliance with the respective national regulations.

- During the entire assembly time it must be ensured that at least one copy of the assembly instruction is available at the construction site.


- Failure to observe our installation regulations and installation instructions and non-use of all system components, as well as the installation and removal of components that were not purchased through us, results in us not being liable for any resulting defects or damage. In these cases our warranty will not be valid.

- Components made of stainless steel are available in different corrosion resistance classes. In any case, it should be checked what corrosion load is expected for the building or component concerned. Z600 coated steel profiles may show red corrosion spots that do not affect static after a certain period of time.


- In cases where material supplied by ISOTEC Enerji San. Ve Tic. Ltd. Şti. is re-cut to size on site, please ensure that the cut corners and edges are burr-free to rule out any risk of injury from sharp corners and edges.

- In cases such as non-compliance with our general safety instructions or the installation of different components, ISOTEC Enerji San. and Tic. Ltd. Sti. has no liability.

COMPONENTS

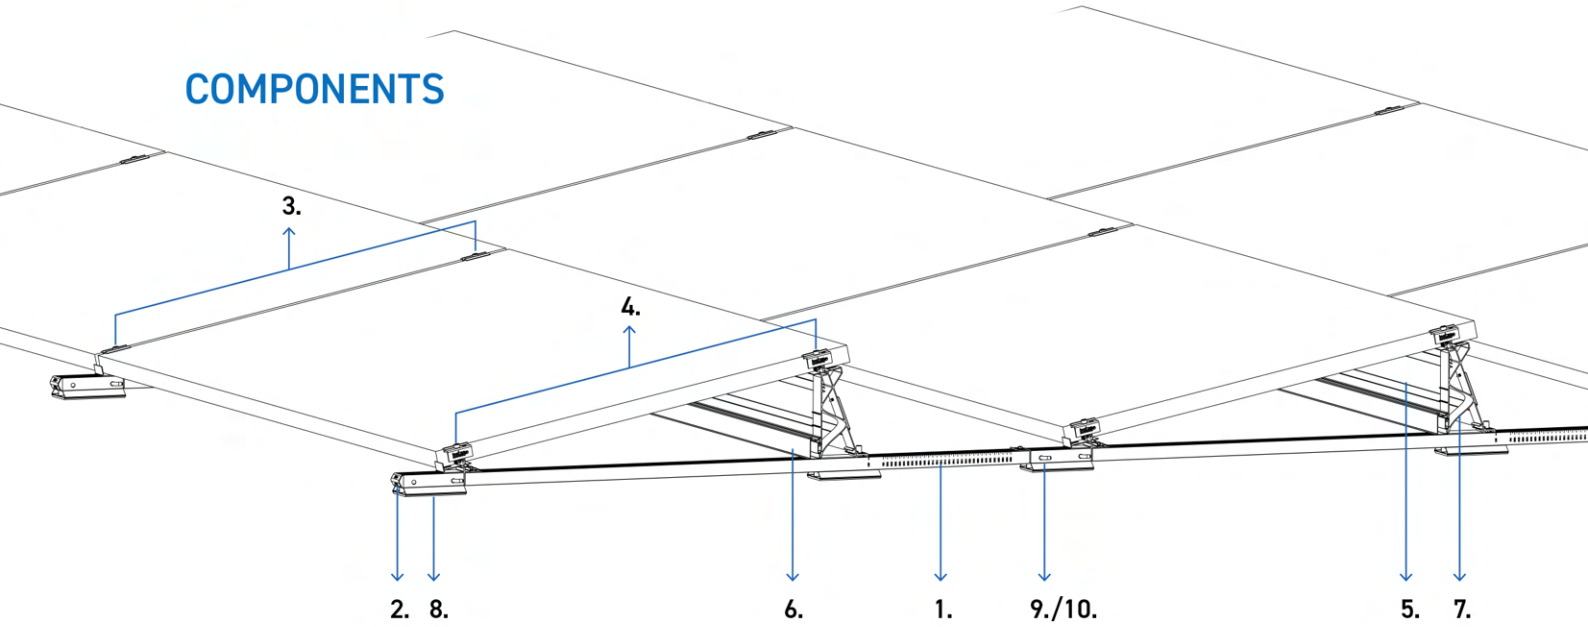

1. Rail Set

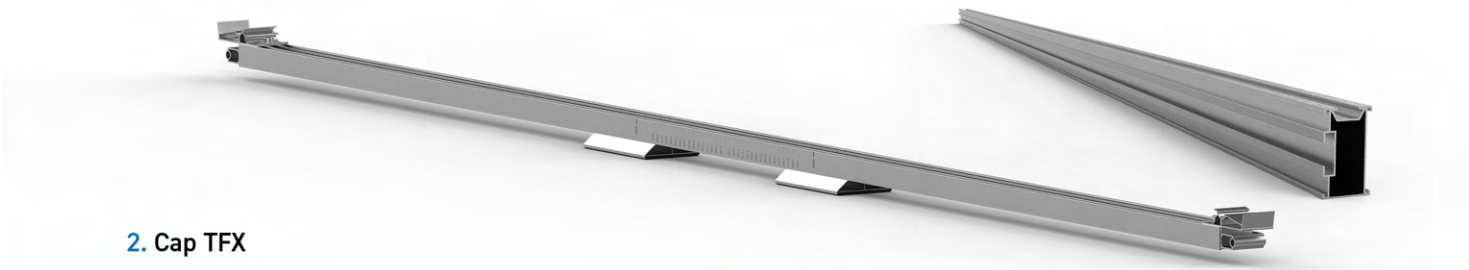

2. Cap TFX




3. Easy Clamp Mid



4. Easy Clamp End

5. Windbreaker

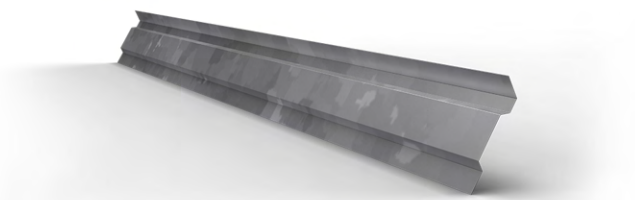


6. TFX Ray

7. ISOFLAT BS3




8. ISOCLAMP




9. Connector 150

10. Connector 350

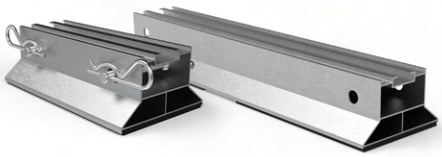


11. Pin

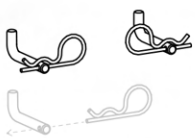


PV Modüle Transverse Length (mm)	Type of Connector Between Rail Sets
<1040	(9.) Connector 150
<1150	(10.) Connector 350

ACCESSORIES

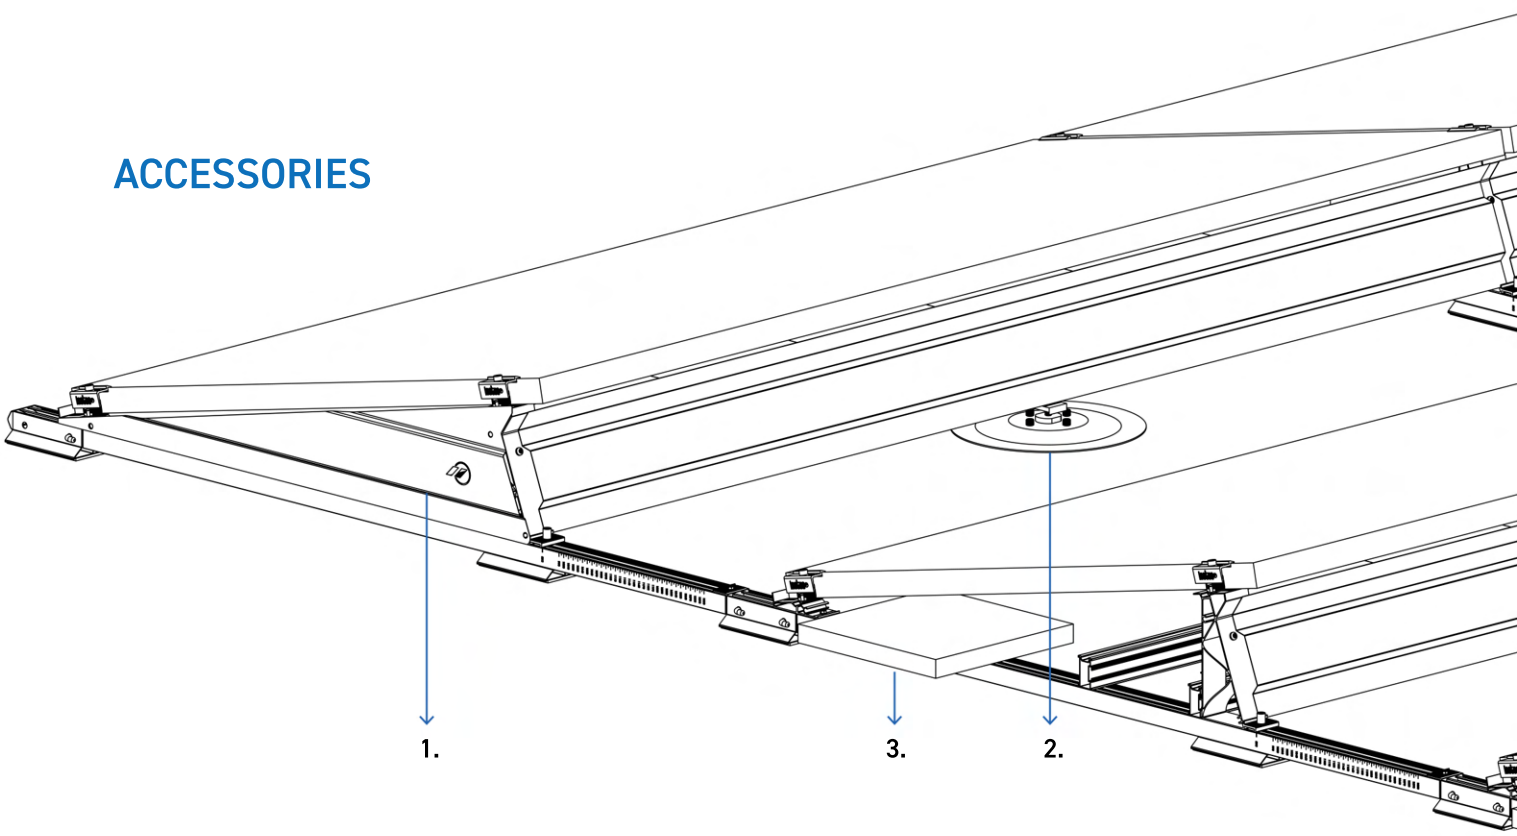


1. RSA R-L

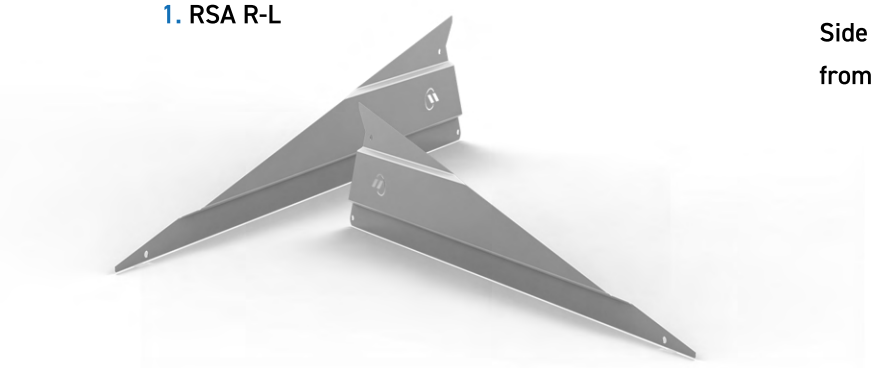


Side spoilers are optionally used in mounting systems made from the short side of the panel.

2. IMC

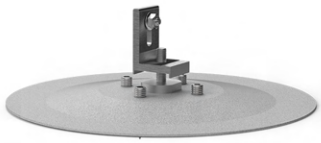


In case the ballasts that are assigned as aresult of the project calculations are not placed in the construction, IMC or anchorage method is used.

3. Ballast Holder

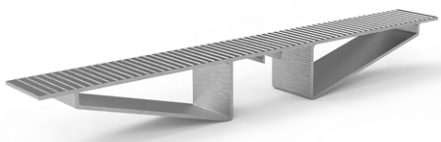


As a result of the project calculations, the necessary ballasts are placed on the rail with the help of a ballast holder.
Use one piece if ballast length <= 30cm, and two pieces if ballast length > 30cm


INSTALLATION

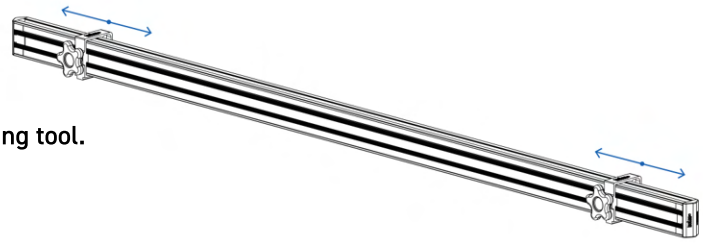


1.The size of the solar panel is measured with a measuring tool.

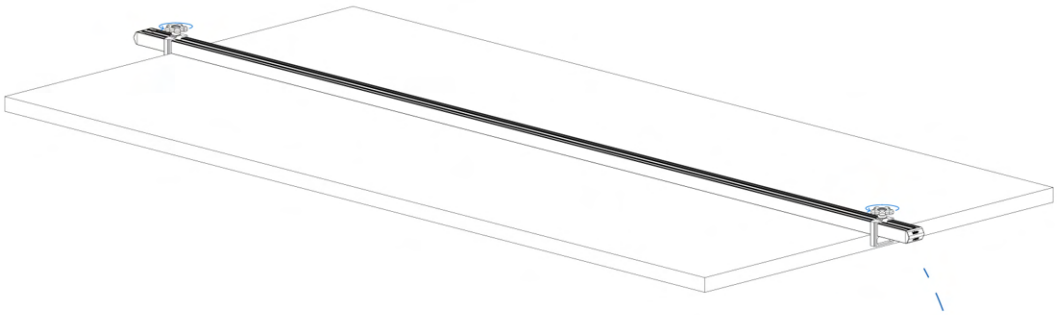


2. The space between rail sets is adjusted by placing the measurement apparatus into the housing of the rail sets.

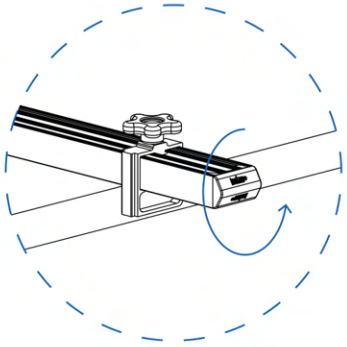


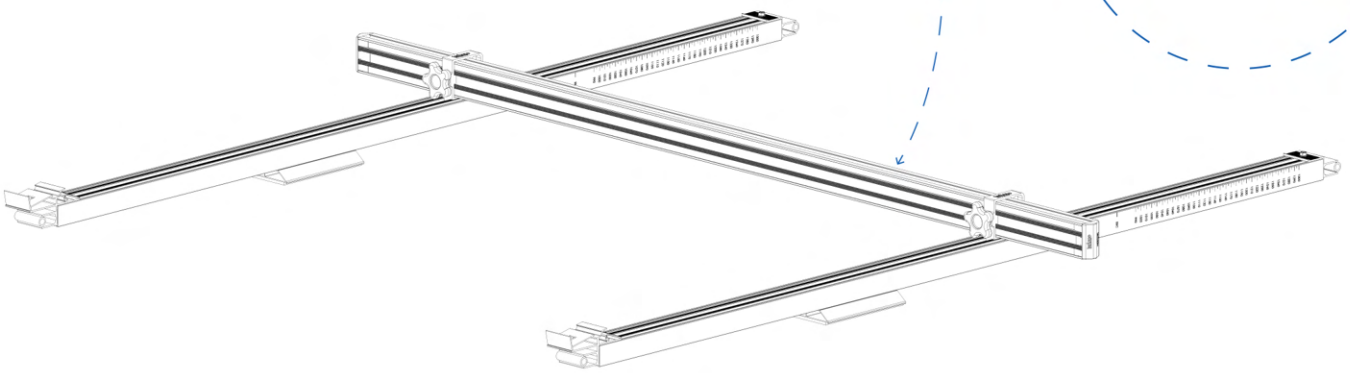


3. The rails are connected to each other with the help of pin couplings and connectors.

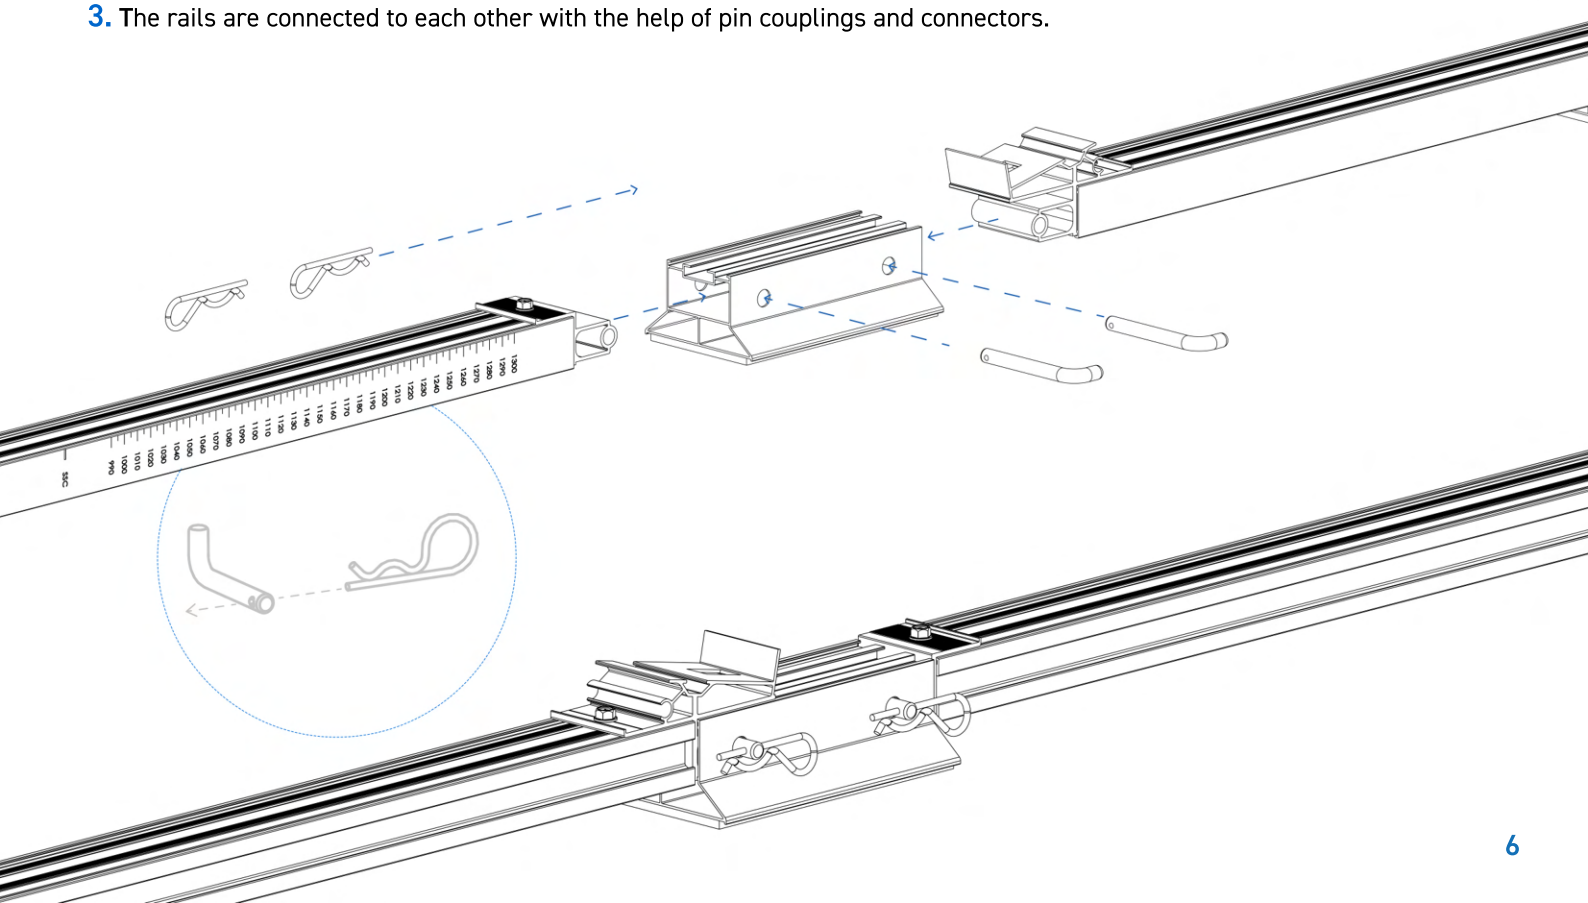


INSTALLATION

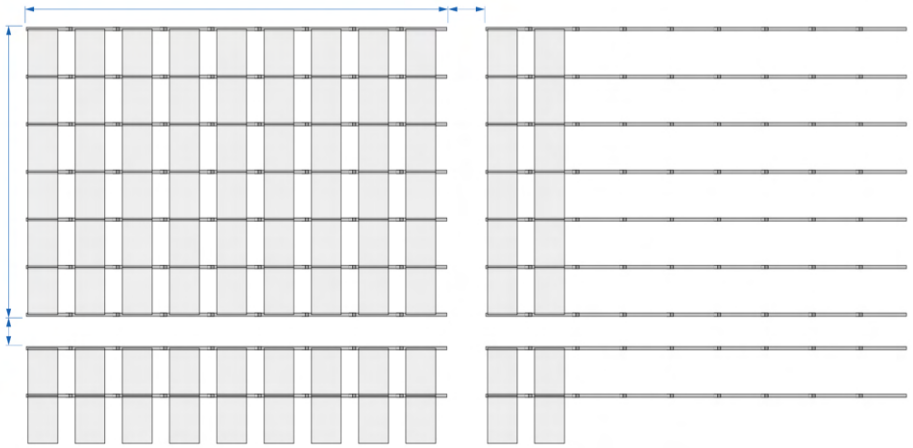

! Please leave a gap between pv module groups for thermal dilatation each 15m

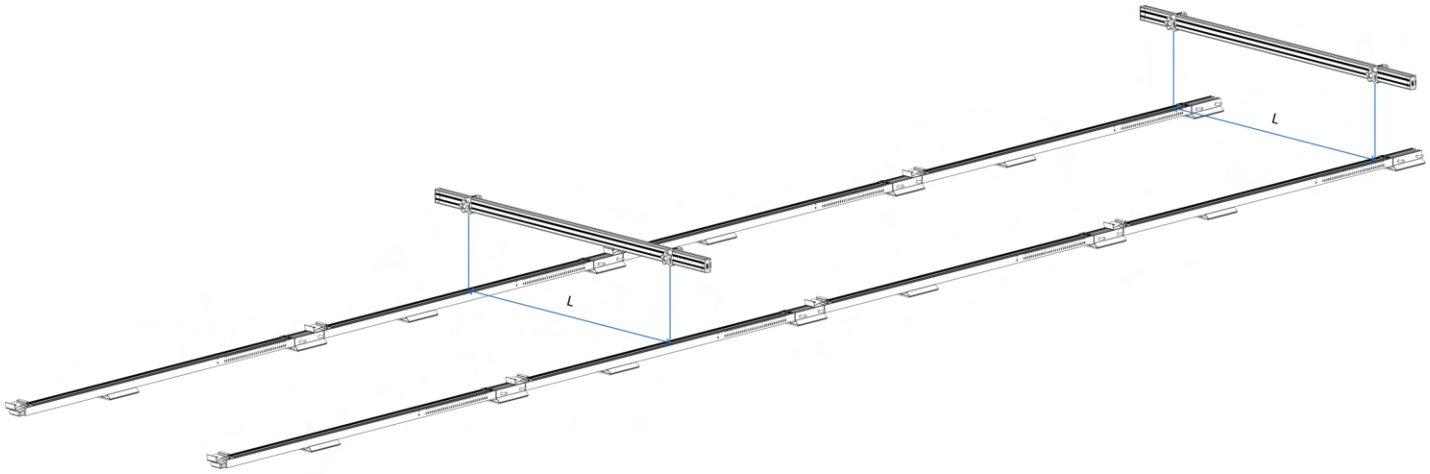

The proper positioning of the rail sets is achieved with the help of the measurement apparatus.

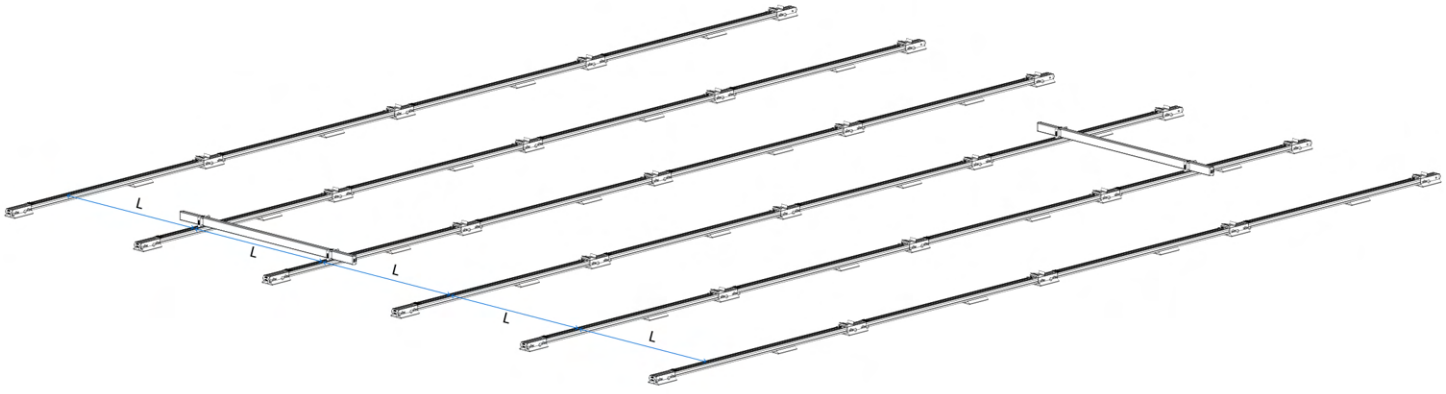


INSTALLATION




The guide point on the tfx rails facilitates panel short edge mounting.


The guide section on tfx rails facilitates panel long edge mounting.

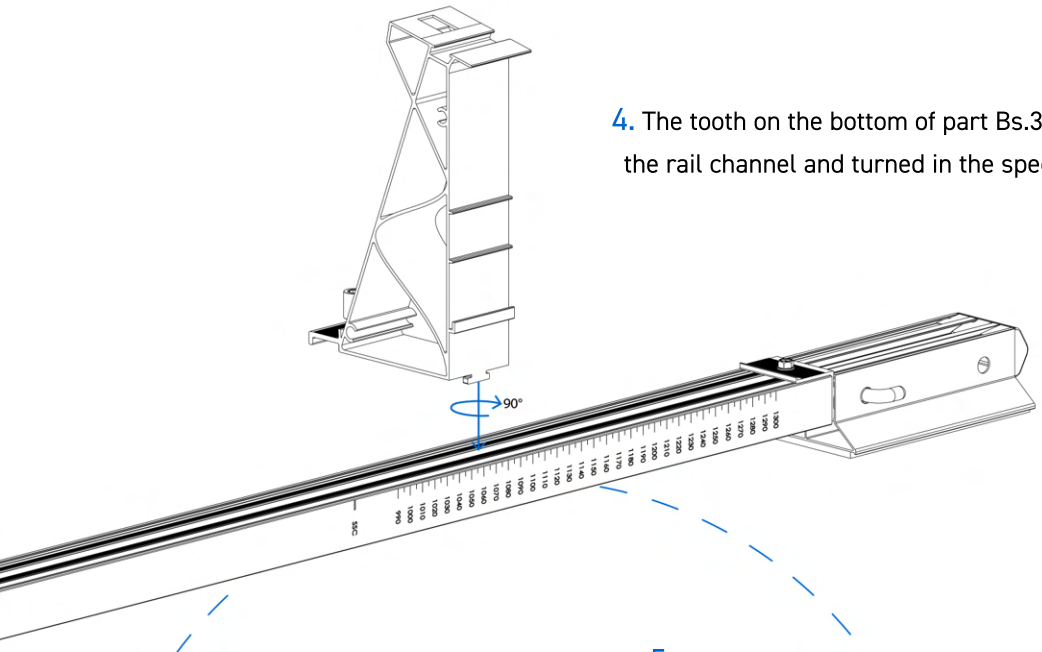

4. The tooth on the bottom of part Bs.3 is inserted into the rail channel and turned in the specified direction.

5. Align and mount the front end of the BS.3 piece to the 'SSC' guide line.

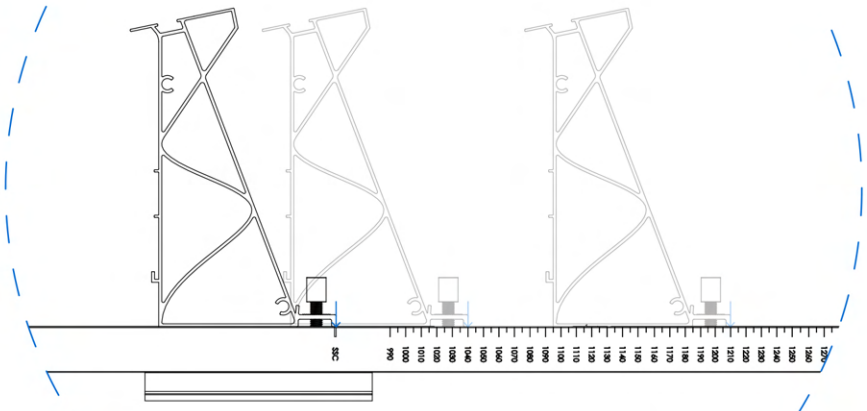


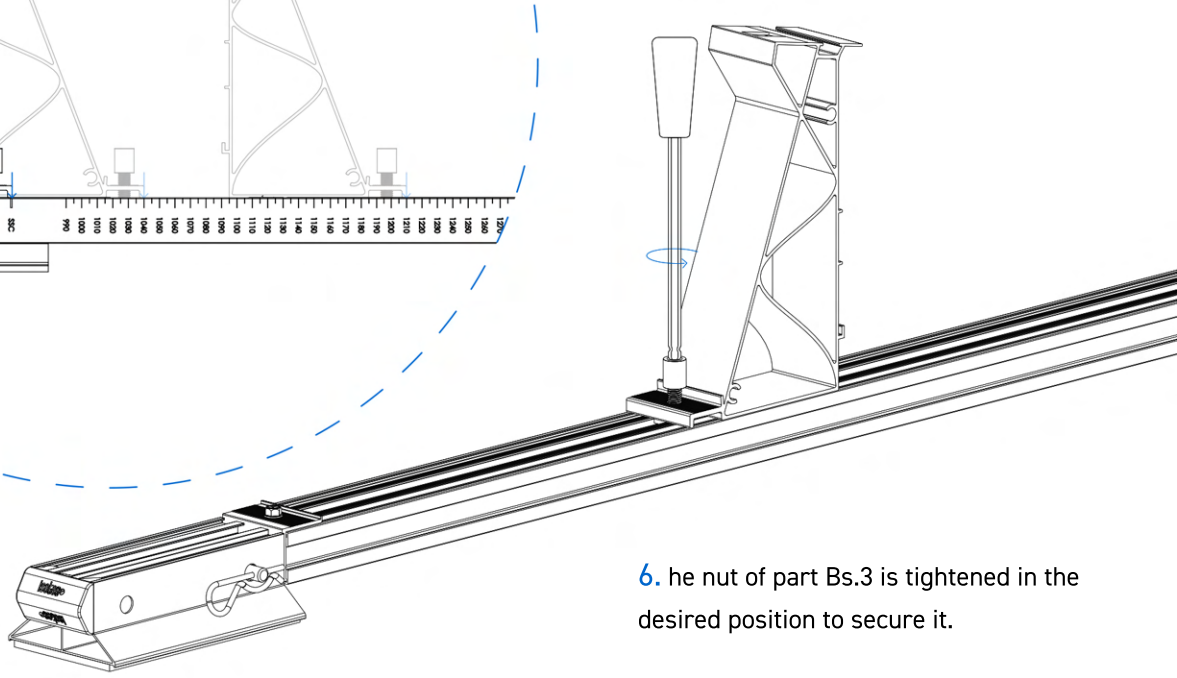

6. he nut of part Bs.3 is tightened in the desired position to secure it.


INSTALLATION


EasyClamp End is used to mount the panels onto the system.

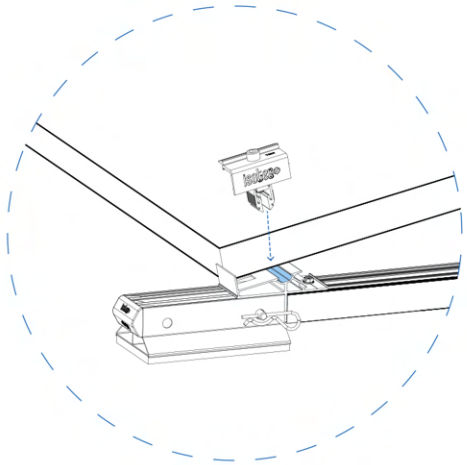


7. EasyClamp End is placed into the necessary channel of part Fs.3.

8. Pv module is installed into the system.

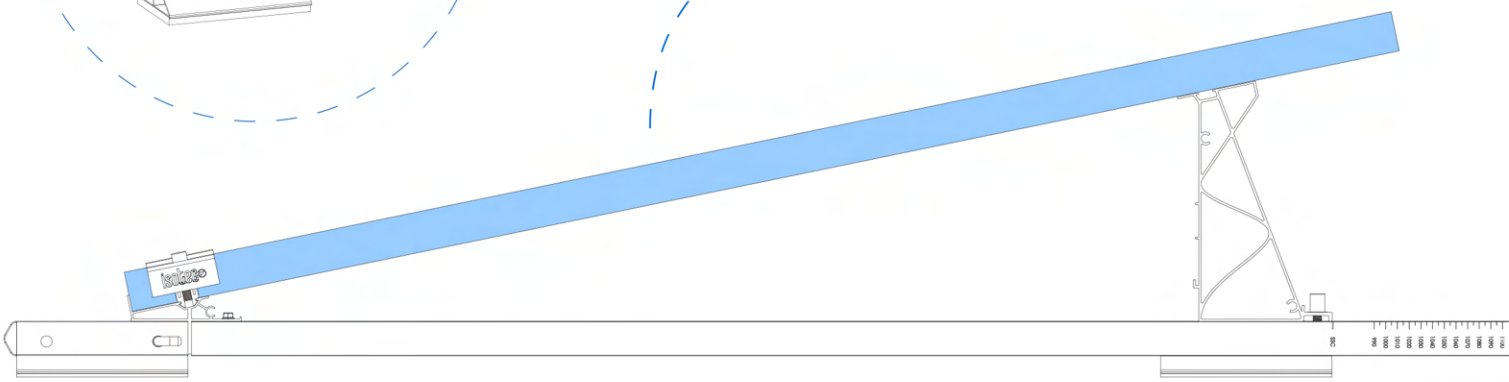

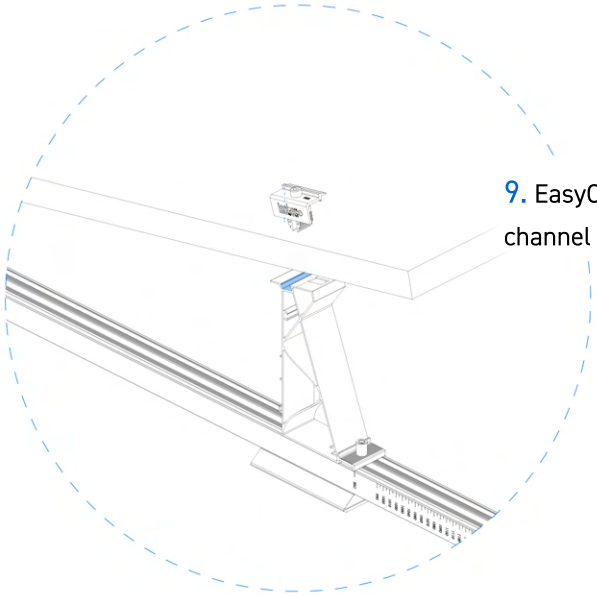


9. EasyClamp End is placed into the specified channel of part Bs.3.

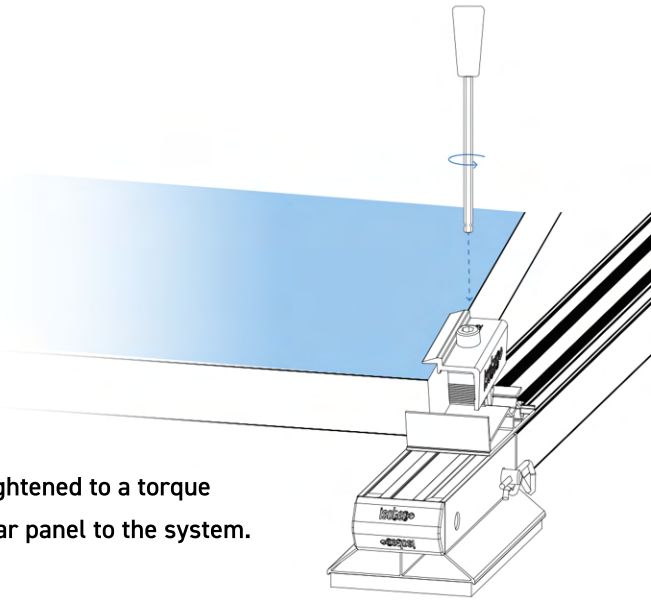


10. **The placed EasyClamp End is tightened to a torque between 14-17Nm to secure the solar panel to the system.**


INSTALLATION

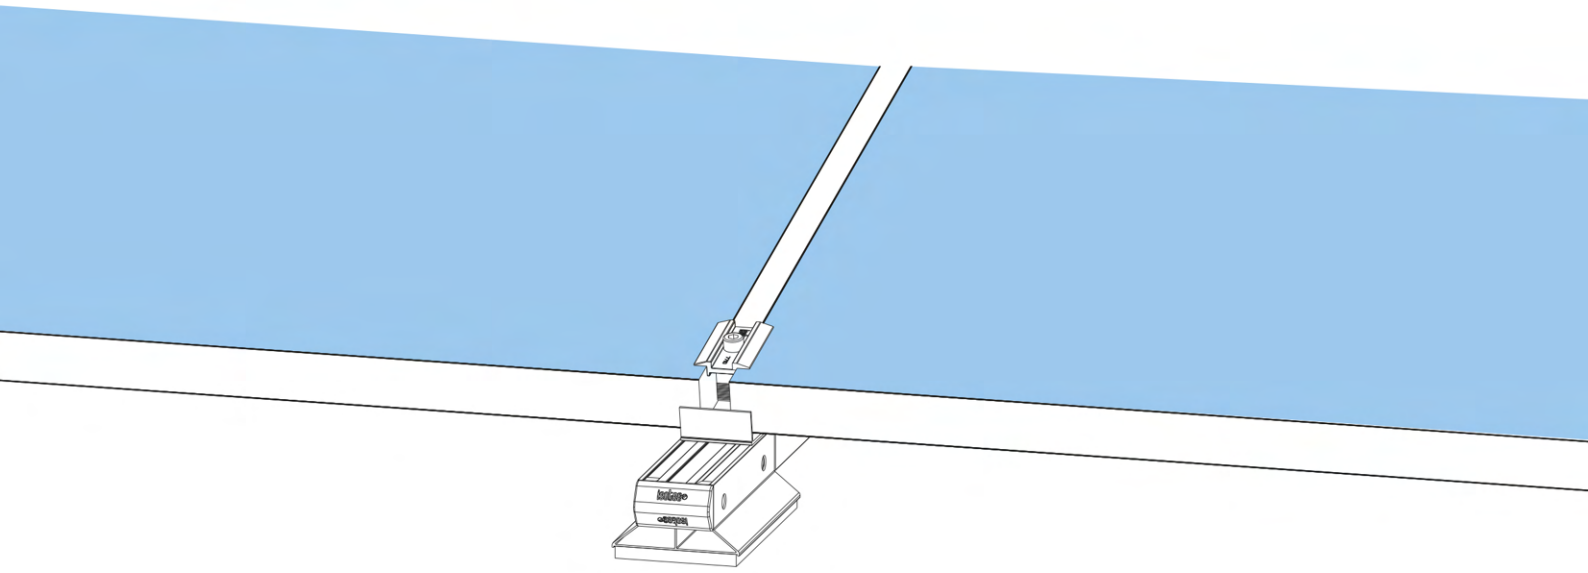

11. Apply steps 9 and 10 using EasyClamp Middle to the space between the two panels.

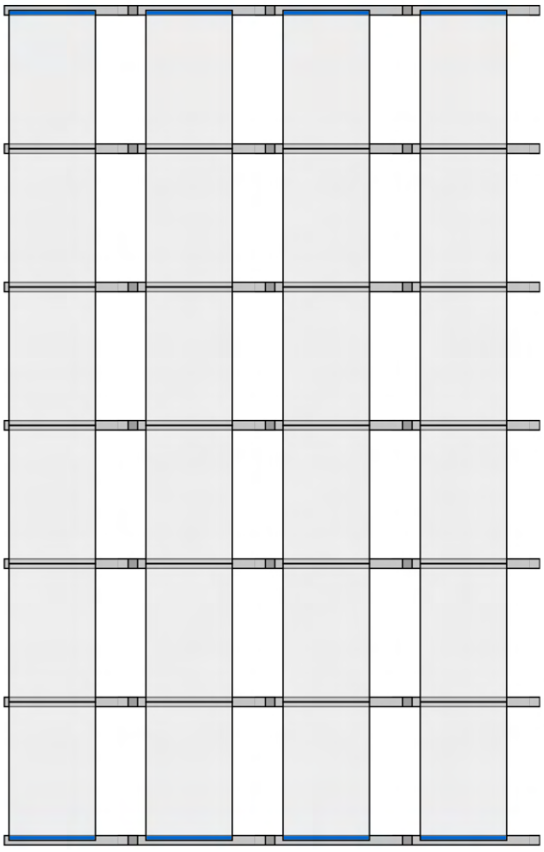

EasyClamp End

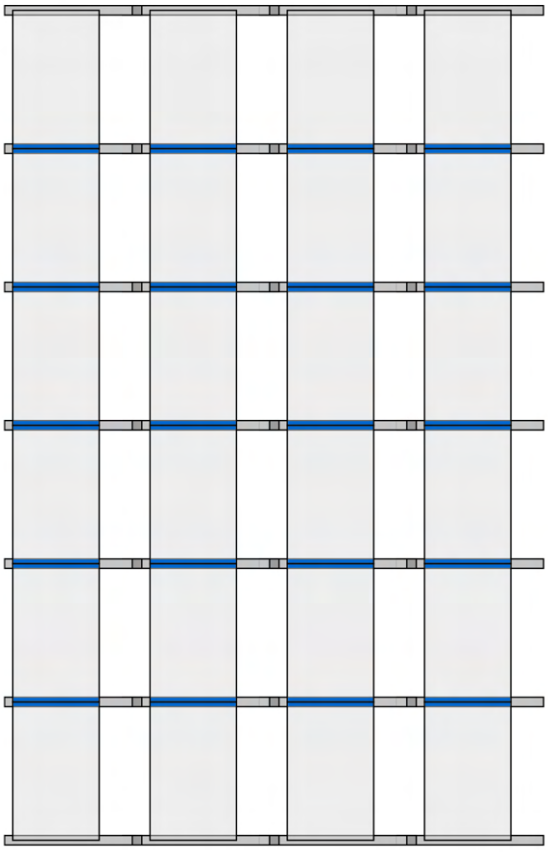


EasyClamp Middle






INSTALLATION

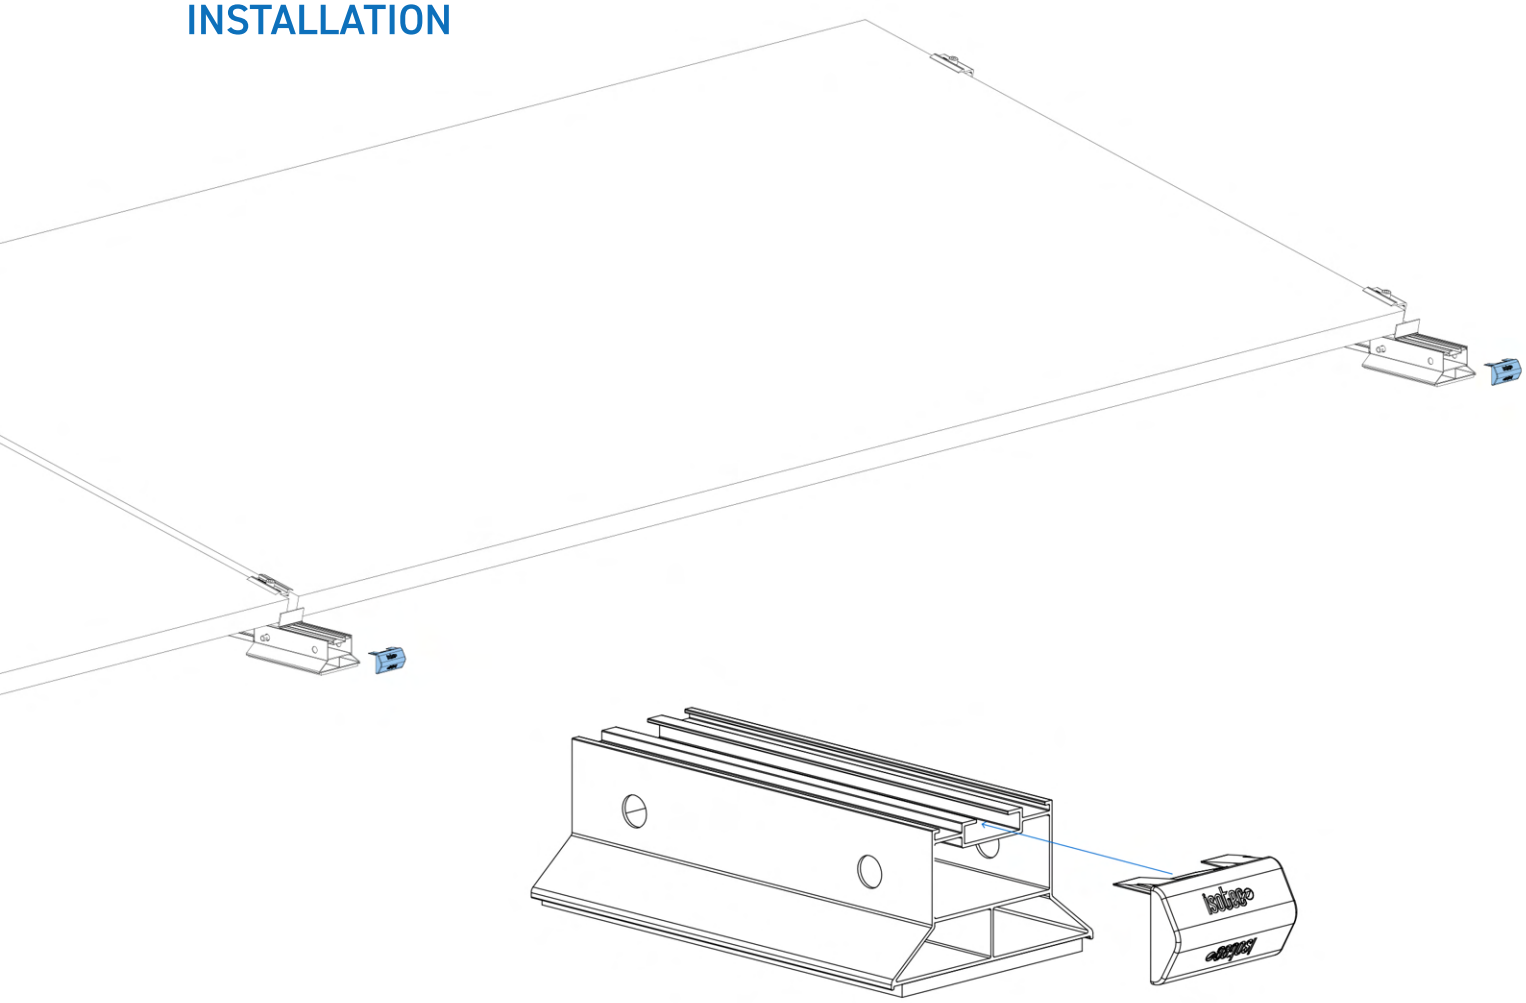



11. The connectors that remain open at the beginning and end of the completed system are sealed with CAP.

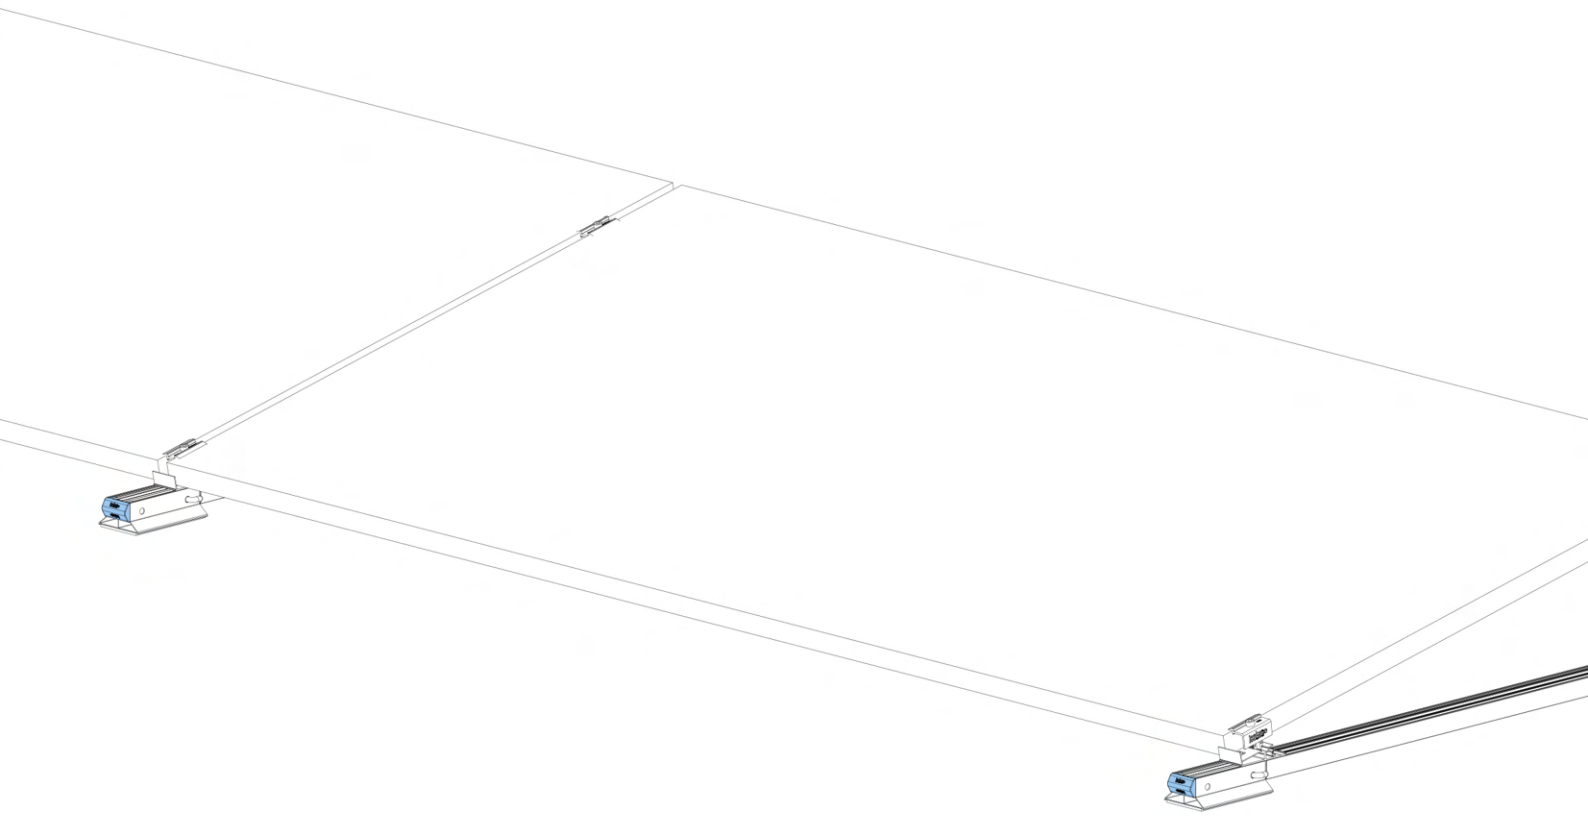

FIXATION TYPES


Standard fixation; the required ballasts, determined as a result of project calculations, are placed on the rail with the help of a ballast holder after the 6th step of installation.

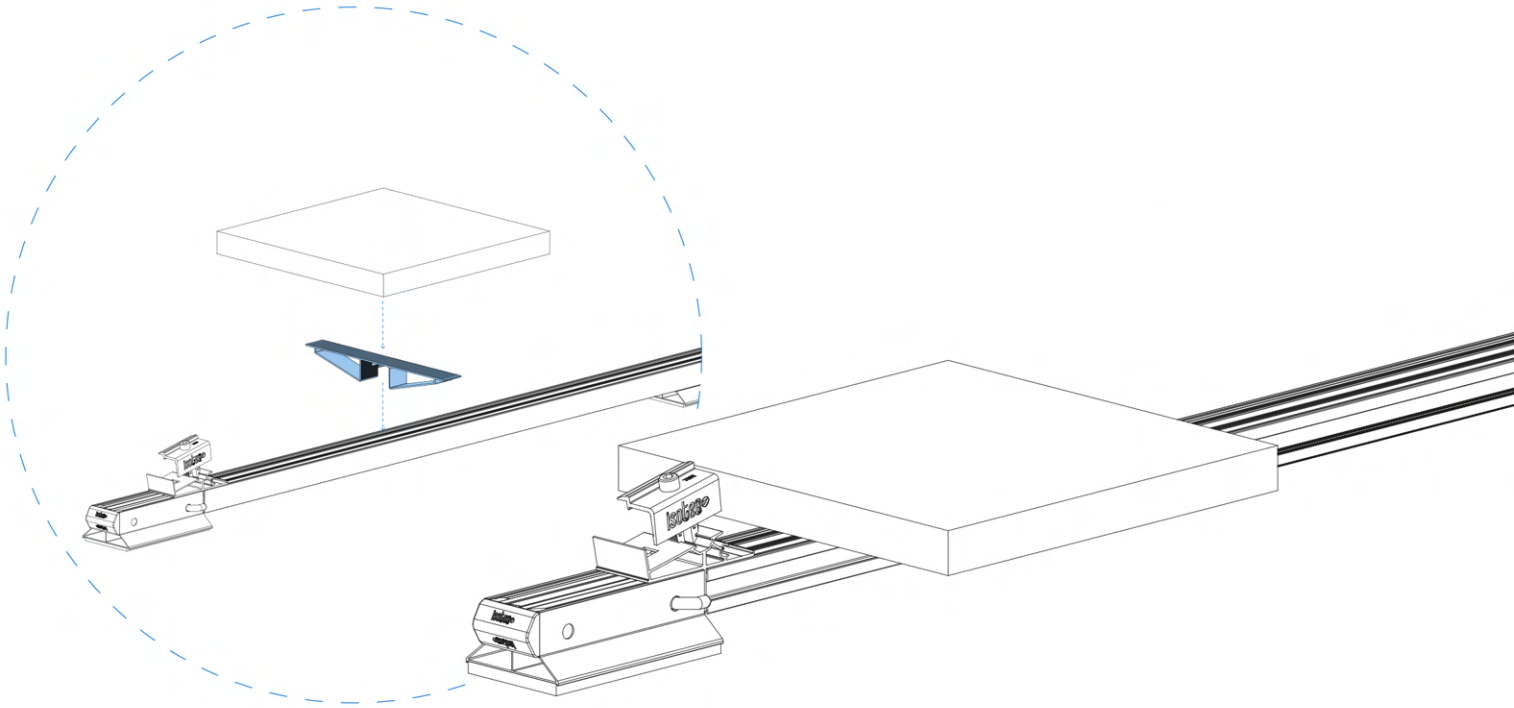


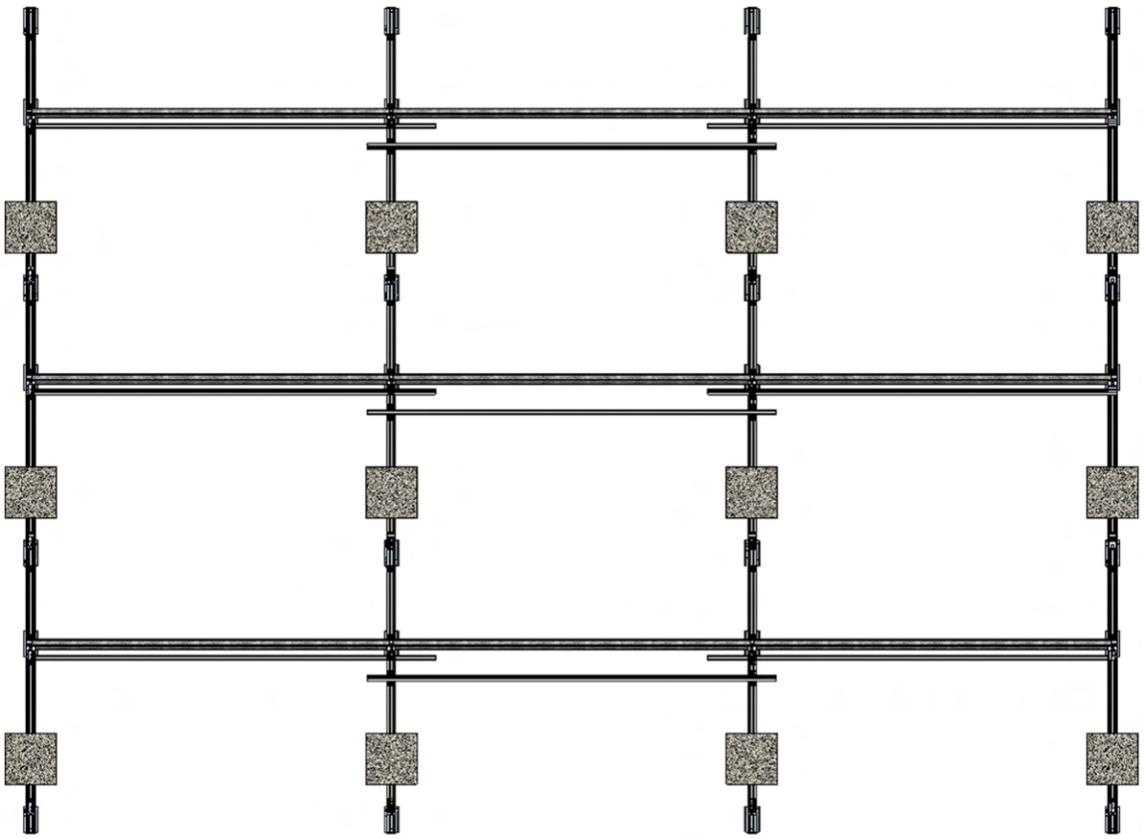

FIXATION TYPES


Medium / High-load fixation; In additional tfx rail set to standard anchoring, the ballasts are placed on the TFX rails that is fixed between the rail sets by using ISOCLAMP after the 6th step of installation.

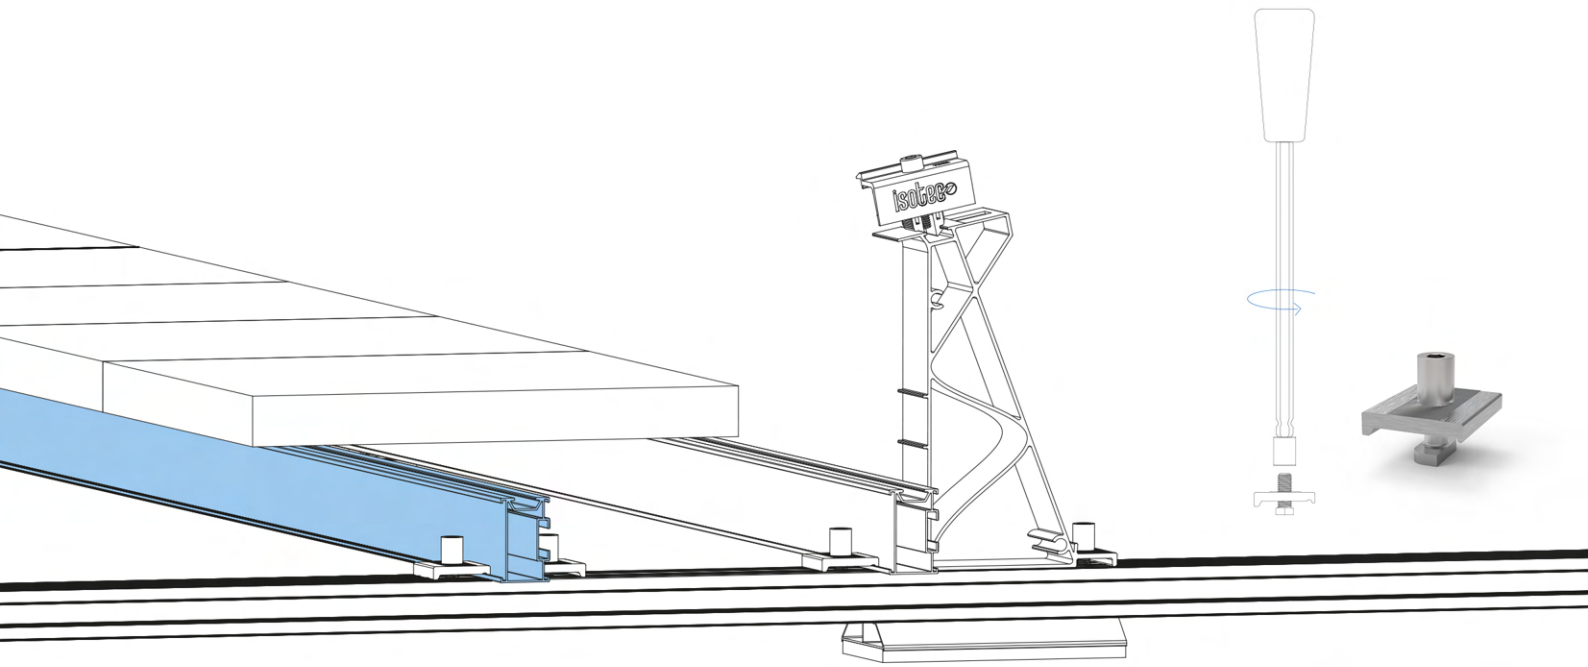


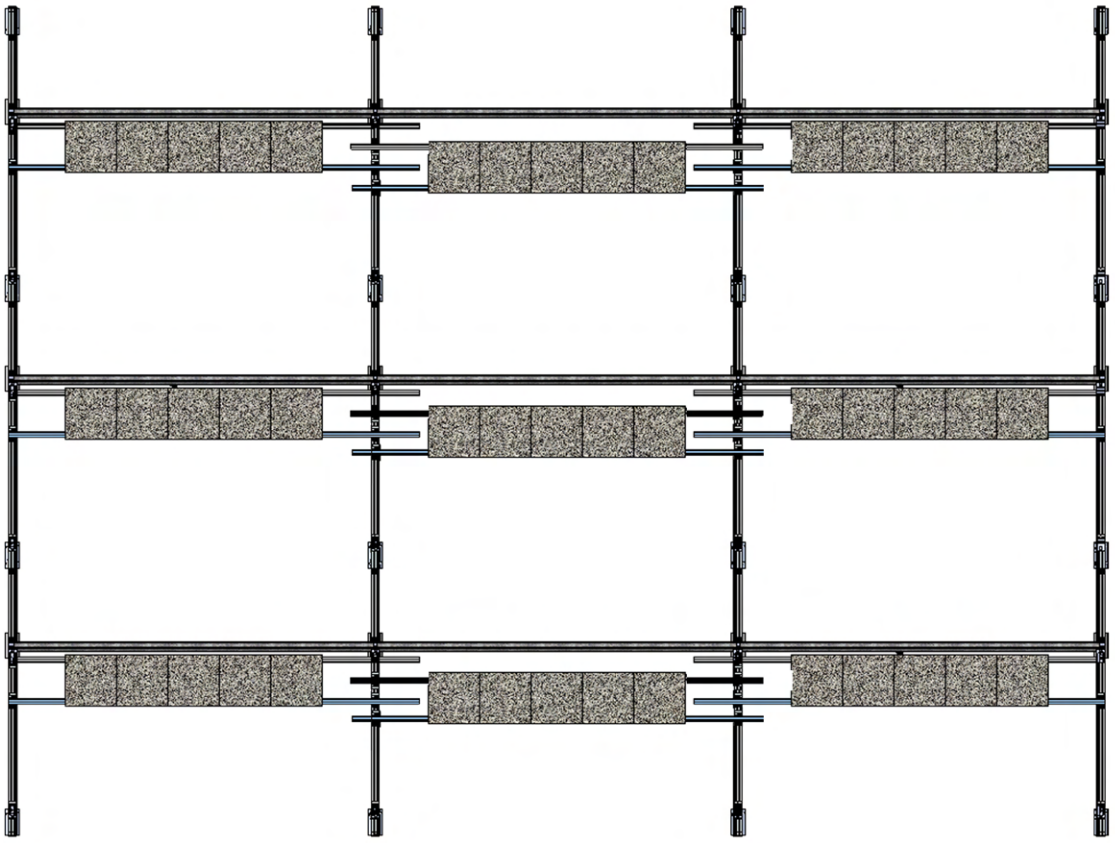


FIXATION TYPES

Max. load fixation; In case the ballasts that are assigned as aresult of the project calculations are not placed in the construction, IMC or anchorage method is used.

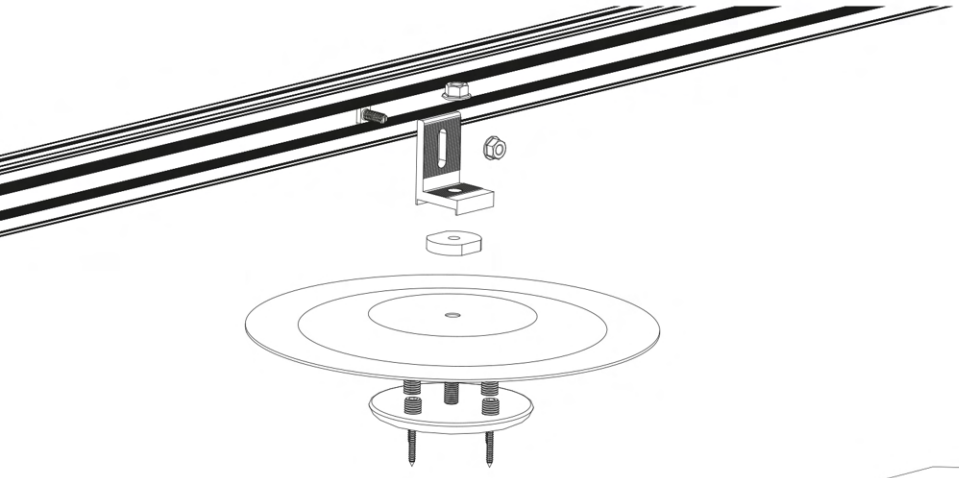

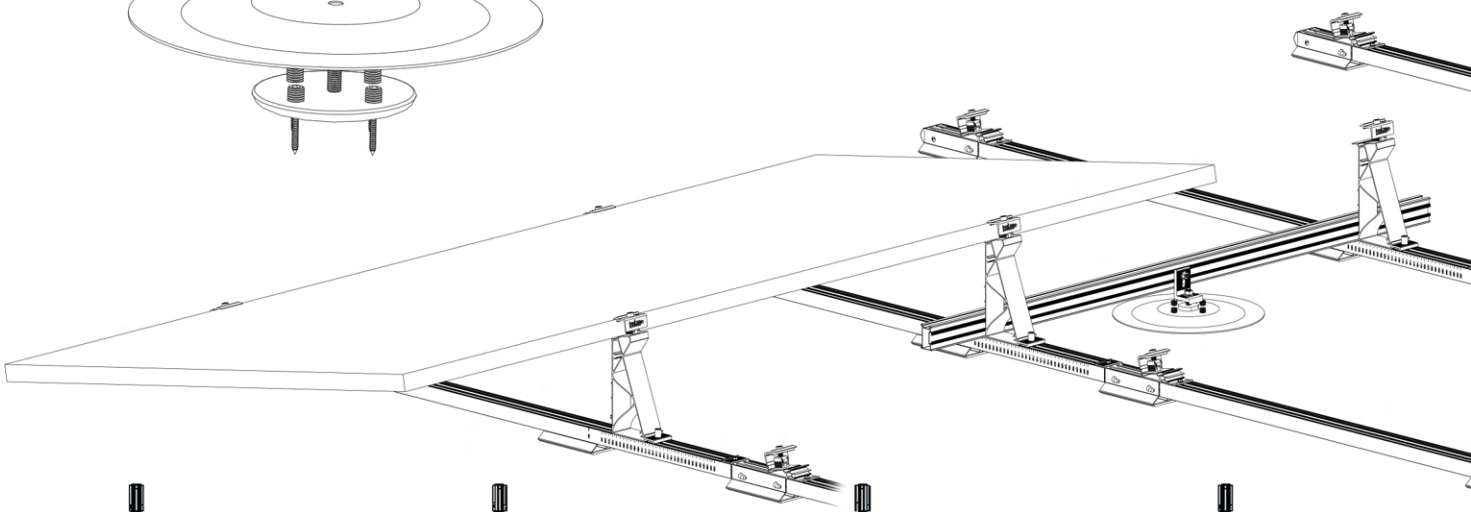

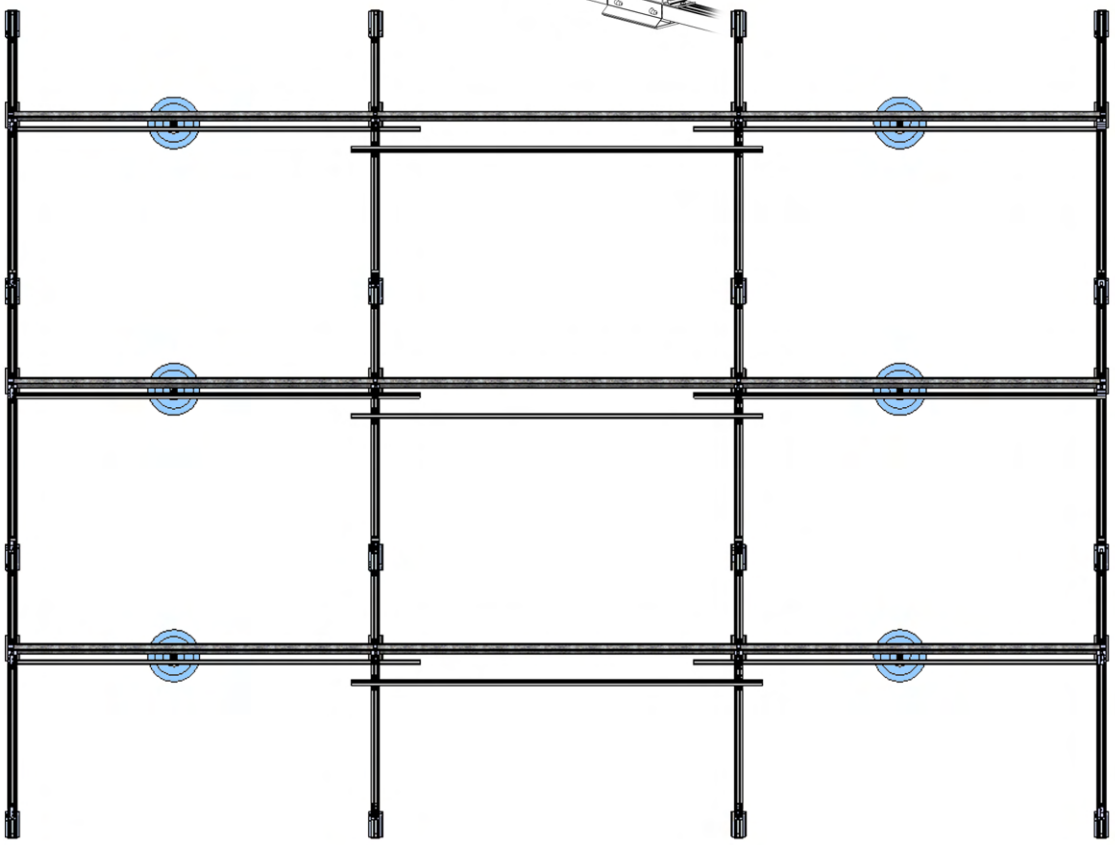

NOTES

Our valued customer,

Thank you for choosing ISOTEC for your solar mounting system.

Your opinion is very important to us.

You can always contact us at +90 (262) 244 43 09 or info@isotec.com.tr for suggestions, feedback and all questions about assembly.

You can be informed about current developments by following us on our social accounts.